

Music Cord



Smaller plug for TV Ears headset

Larger plug for music source



Input jack

Output jack

1. Plug smaller end of the music cord into the input jack under the 'tone' dial on your TV Ears headset
2. Plug the opposite, larger end of the music cord into your music source.



(Works with stereo's, CD players, MP3 players, computers, and with an adapter, on Airplanes)

Cell Cord



Headset jack on cell phone

Mic plug of phone cord

Input jack for phone cord mic plug

Plug for phone headset jack



1. Insert end of cell cord with microphone into the input jack under the 'tone' dial of your TV Ears headset.
2. Plug the opposite end of the cell cord into the headset jack of your cell phone.



(Works with cell phones, 900 MHz wireless home phones, wireless business phones, & with an adapter, most corded home phones)